

Infrared Grill

User Manual



M-MTDB041201

Dear MiiTi User,

First of all, thank you for choosing our product.

This product you have purchased will first make your life easier and save you time with fast, innovative, modern cooking techniques, and will also provide you with the opportunity to be together with your family and guests more.

Please read the instructions in this manual carefully to use the product you have purchased for a longer life and more efficiently.

Please refer to the user manual in case you need it in the future

PLEASE KEEP THIS DOCUMENT!

Your device will serve you for many years if you provide the necessary care and maintenance.

We hope you enjoy using your device.

Meanings of Symbols

The following symbols are used in various sections of this user manual.

Symbol	Type	Meaning
	WARNING	Risk of serious injury or death
	RISK OF ELECTRIC SHOCK	Risk of dangerous voltage
	FIRE	WARNING: Fire risk / Flammable material
	ATTENTION	Risk of injury or damage to property
	HOT SURFACE	Burn hazard

CONTENTS

1- Important information regarding security.....	3
2- Pre-Installation and Installation Warnings.....	5
3- Things to Consider During Transportation and Shipping.....	6
4- Environmental Protection and Savings.....	7
5- Electrical Connection	7
6- Product Introduction.....	9
7- Product Technical Specifications.....	11
8- M-MTDB041201 Wiring Diagram.....	11
9- Product Usage Instructions	12
10- Error Definition and Possible Causes	14
11- Product Cleaning and Maintenance.....	15
12- Cooking Tips.....	16
13- WARRANTY CONDITIONS.....	18
14- WARRANTY CERTIFICATE.....	18
15- TECHNICAL SERVICE LIST.....	20

1- Important Information About Security



General Warnings

- Read all instructions before using the device and keep them in a suitable place for future reference.
- Check your product after removing it from its packaging. If there is any shipping damage or malfunctioning functions on the product, contact the authorized service.
- Warranty rights are void in case of damage caused by incorrect use.



Children's Safety

- Prevent risks for children and people who may be exposed to danger.
- These devices should only be used by children aged 8 years and older, as well as individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, under supervision. Even if they understand the safe use of the device and its associated hazards, electrical products can still be dangerous for children. Children and pets should not play with the product, climb on it, or enter it (They should not insert their limbs into it.)
- Keep packaging materials away from children. There is a risk of injury and suffocation.
- Do not place objects on the product that children can reach.
- Before recycling a product that has reached the end of its service life, remove the power cable from the product for children's safety and render the product inoperable.



Burning Hazard

- The top glass, tray, grill and metal surfaces of the product are hot. It may cause burns. For this reason, children under the age of 8 must be ABSOLUTELY kept away from the environment where the product operates. Children over the age of 8 can use the product under supervision.
- When the product is first used, an odor and smoke may be emitted from the use of insulation materials and heating elements.
- To eliminate this, before using the product, turn the power adjustment button to maximum power, adjust the moving body to the highest level, pour 0.5 liters of water into the cooking tray and run it idle for ~30 minutes. After the process is over, clean the product with a damp cloth while it is warm.



Fire Hazard

- Flammable objects should never be stored in the cooking compartment.
- The temperature of the areas reached while the product is operating may be high. For this reason, leave a distance of 25 cm on the right and left of the product.
- Flammable and combustible materials that can easily burn should not be kept around the product.

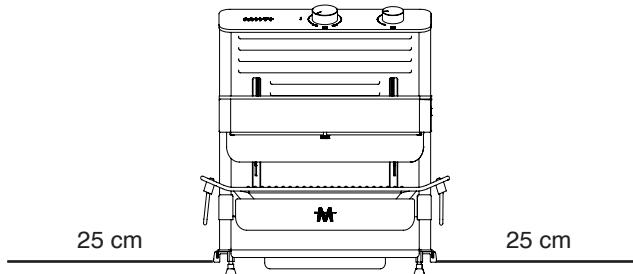


Figure 1



Risk of Injury

- Glass scrapers, sharp-tipped or abrasive cleaning materials should not be used.
- Do not clean the product while it is hot, do not touch the metal surfaces and the upper glass.



Danger of Electric Shock

- The product may only be repaired by authorized service personnel.
- Only original spare parts should be used when repairing product.
- Damaged electrical cable insulation poses a danger.
- If the power cable of the product is damaged, do not use the product and contact the technical service.
- Do not plug the product into sockets that are loose, disconnected, broken, dirty, oily or have a risk of contact with water (for example, water that may leak from the counter).
- Never touch the plug with wet hands! Do not pull the cable to unplug, always pull by grasping the plug.
- Never allow the mains connection cable to come into contact with hot parts of the device or heat sources.
- Do not pinch the mains connection cable against sharp surfaces in moving parts of the device.
- Never bend, crush or modify the mains connection cable.
- Moisture entering the device may cause electric shock.
- Damaged appliances should never be used.
- If the appliance or the mains connection cable is faulty, the plug must be pulled out immediately or the fuse must be switched off at the fuse box.
- Do not immediately start the appliance that is brought from outside or from a cold environment. Start it after waiting at room temperature for at least 30 minutes.

2- Pre-Installation and Installation Warnings

- Be sure to remove all packaging materials and the protective plastic wrap from the product before use.
- This product should not be used for any purpose other than cooking. Any other use (e.g. heating the room in which it is located) is dangerous and inappropriate.
- Our company cannot be held responsible for any damage that may occur to people, animals or property as a result of inappropriate, incorrect or unsuitable use of the product.
- Avoid contact with the metal surfaces on the product and the upper glass as the product will overheat during use. Only hold the product by the handle at the bottom during use.
- Never cook or fry on the top glass of the product.
- Do not place any weights (pots, pans, plates, tongs, etc.) on the glass surface.
- Never touch the product if your hands or feet are wet or damp.
- Do not allow children or non-adults to use the product without supervision.
- If the product breaks down or does not work properly, turn it off and unplug it and do not intervene.

Preventing Damage


The following precautions must be taken into account when using the device.



ATTENTION


Never hold the product from the adjustable cooking section while carrying it. Carry the product by holding only the carrying handles on both sides of the bottom base plate. (figure 3).

Figure 2

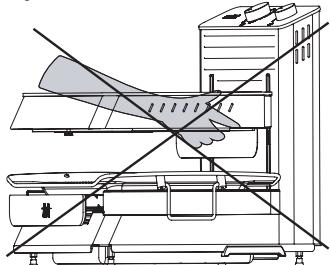

Do not lift the product by holding the adjustable cooking section.

Figure 3

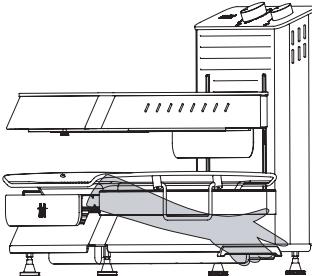

Lift the product by holding the carrying handles located on the base plate as shown.

- Do not keep the product in a humid environment. Never operate the product if it is humid.
- Do not operate the product near flammable objects (tulle, curtains, etc.) or a heat source (gas stove, electric stove, etc.).
- Do not store food in the cooking area.
- Do not immerse your product in water. (except for the washable tray and grill)
- Do not clean the product with an excessively wet cloth.
- Do not use any other accessories other than the original tray and grill that come with the product.

3- Things to Consider During Transportation and Shipping

- If you need to transport the product, use the original packaging of the product.
- Follow the transportation markings on the packaging. Place the packaging materials in the correct places to prevent damage to the product during transportation.
- If you cannot find the original packaging, prepare a transportation package by protecting the device against external impacts, especially the outer surfaces and glass surfaces of the product.

4- Environmental Protection and Savings

Packaging Recycling

- Packaging materials are environmentally friendly and recyclable.
- After receiving the product, please keep the packaging materials in a safe place for the next transportation during the warranty period.
- For reuse of waste packaging, throw it into the relevant recycling bins according to its characteristics (protective nylon, cardboard, styrofoam, etc.).
- When disposing of any electrical equipment, make it unusable by cutting its cable.

Energy Saving

- Do not operate the product outdoors.
- Place the ingredients to be cooked so that they cover the cooking grill of the product.
- Frozen foods should be defrosted before preparation.
- If the product description and setting recommendations are followed, the product will become more efficient.

5- Electrical Connection

- The appliance must be connected to the mains electricity network in accordance with the laws and regulations in force and only by an authorized electrician.
- Make sure that the power from the mains meets the power stated on the device's rating label.
- For the Industrial Type model with 9 infrared filaments, the product must be connected to the mains electricity network only by an authorized electrician in accordance with the laws and rules in force.



ATTENTION

- The device must be grounded.

- A grounded plug is mounted on the mains cable of your product. This plug must be used with a grounded line. If there is no grounding, have the grounding installation done by a licensed electrician.

Before connecting the appliance to electricity;

- Do not place the power cord in contact with hot surfaces and keep it away from moving parts of the product.

- If the power cable is damaged, contact the nearest authorized service in your location. Have the authorized service replace it with a new cable of the same size, with plastic insulation and that can withstand the electrical current required by the appliance, supplied by the manufacturer.

- The use of adapters, multiple sockets or extension cords is not recommended. If necessary, an adapter or extension cord can be used in accordance with the applicable safety laws. However, never exceed the maximum current capacity and maximum power specified for the adapter.

- After the connection process is completed, test the moving parts and heating elements of the device for ~2-3 minutes.

- The electrical safety of the device is only guaranteed when it is connected to a suitable source and properly grounded in accordance with the rules.

- Our company cannot be held responsible for any damage that may occur to people, animals or property due to the device not being grounded properly.

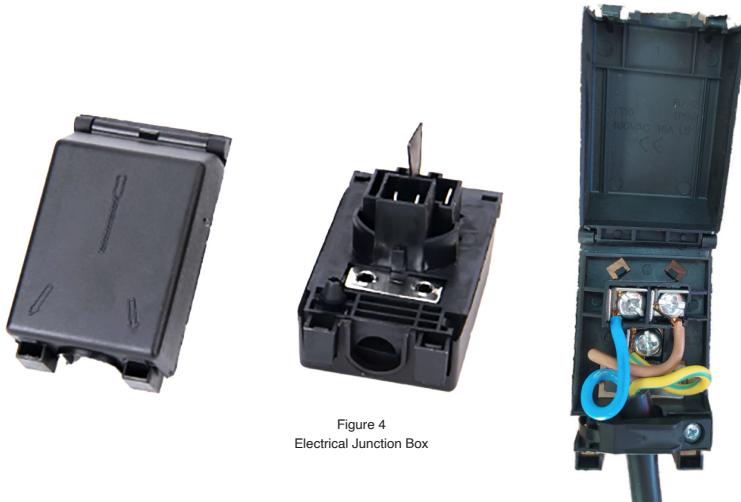


Figure 4
Electrical Junction Box

6- PRODUCT INTRODUCTION

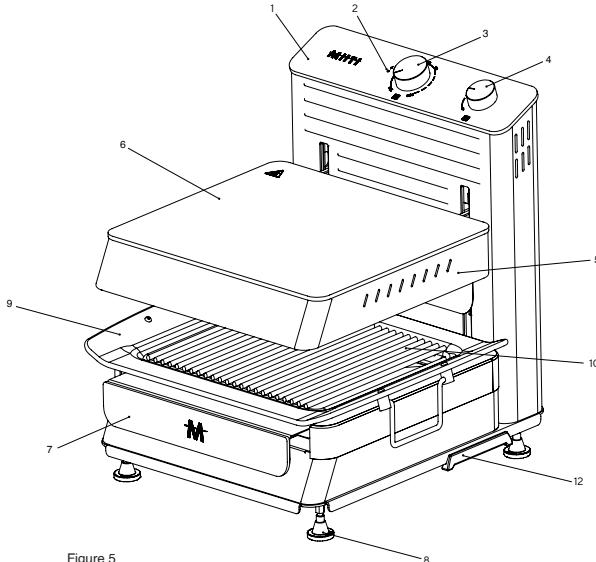


Figure 5

1- Control Panel

You can adjust all functions of your product via the control panel.

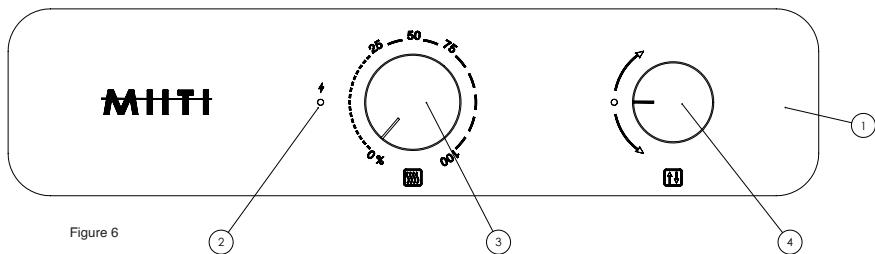


Figure 6

Note: Depending on the device type, some details in the picture may differ. For example: color, glass, material

2 - Power control lamp

Indicates whether the product is working or not. The intensity of the lamp changes according to the power.

3- Power adjustment knob

Allows adjustment of the product's heat intensity.

4-Upper and Lower Distance Adjustment Knob

Enables the adjustable cooking section to move up and down.

5- Adjustable Cooking Section

Provides efficient cooking at high temperatures using infrared technology. With upper and lower distance adjustments, cooking time and heat can be customized according to user preferences, offering a more personalized cooking experience.

6- Top Glass

Made of high-temperature-resistant tempered glass.

7- Product Handle

The handle allows for easy movement of the tray section.

8- Adjustable Feet

Creates a distance between the product and the floor and ensures its balance on the counter.

9- Tray

The tray is a cooking tool designed for preparing food. It is used by placing it on the tray base during the cooking process.

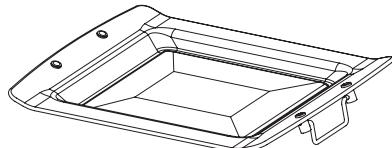


Figure 7

10- Grill Rack

Designed for safely and practically removing the grill rack from the tray.

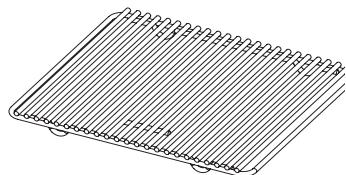


Figure 8

11- Grill Rack Holder

It is designed to remove the grill from the tray in a safe and practical way.

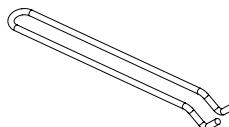


Figure 9

12- Carrying Handle

The carrying handle ensures safe and easy transportation of the device.

7- PRODUCT TECHNICAL SPECIFICATIONS

MODEL: M-MTDB041201

Voltage: 220 - 230 V ~

Frequency: 50/60 Hz

Ampere: 8 A


Total Power: 1760 W

Product External Dimensions: 392 x 427 x 365mm

Net Weight: 14,5 kg

Cooking Surface: 275 x 233 mm

8- M-MTDB041201 CABLE CONNECTION DIAGRAM

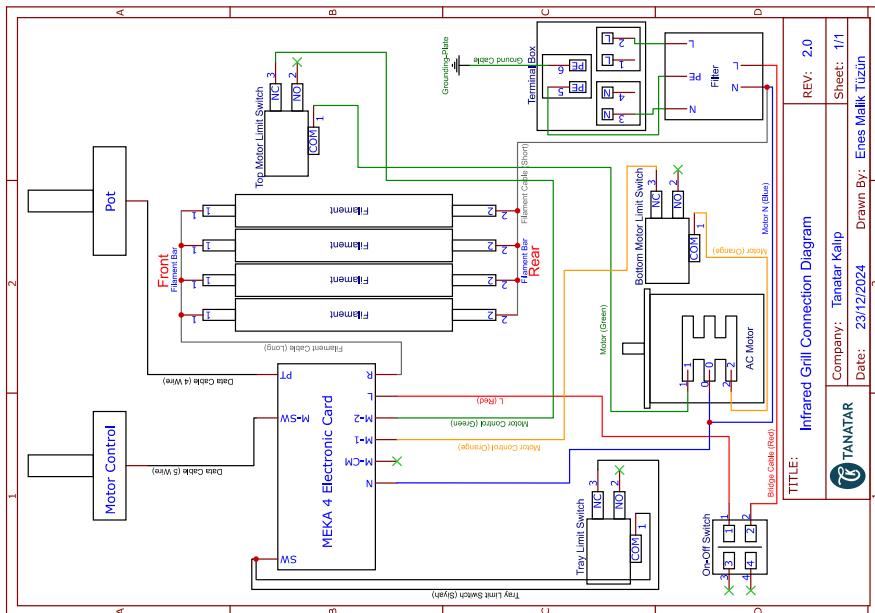

9- PRODUCT USING INSTRUCTIONS

- If there is any problem that may harm you or the product while installing the product (for example; the power cable is damaged, the upper moving section is not parallel with the lower section), do not operate the product and inform the nearest authorized service.
- Before using your product, make sure you remove all packaging materials and the protective nylon on the product.
- Place the product in an area suitable for use. Make sure to leave a distance of 25 cm to the right and left of the product. Do not place flammable materials near it.
- Plug the power cable on the back of the product into a socket that is suitable for the conditions.
- Make sure that there is no flammable material (protective nylon, label, cardboard, styrofoam) left in or on the product.
- Turn the on/off switch on the back of the product to position (I).
- To move the adjustable cooking section, turn the lower-upper distance adjustment knob clockwise and bring the upper section to maximum height. (Figure 10)
- Turn the power setting button to 100 and run the product for approximately ~ 5-10 minutes without any load and then turn it off. In this way, any waste and layers that may have remained in the product during production will be burned and cleaned. During this process, a one-time odor and smoke may come out of the product due to the heating elements. Ventilate your environment to avoid being bothered by the odor and smoke. (Figure 11).

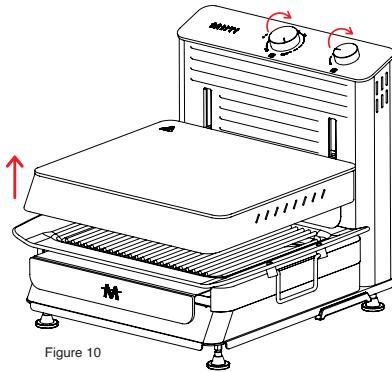


Figure 10

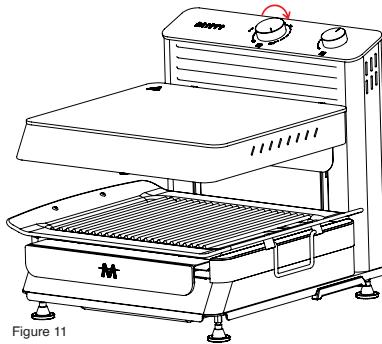


Figure 11

- After completing the cooking process with the product, turn the power switch located at the back of the product to the (0) position and unplug the power cord from the outlet.
- When operating the product outdoors (balcony, veranda, garden, etc.), electrical sockets and extension cords must be insulated to prevent liquid contact; the electrical network and auxiliary materials to be used must also be suitable for the usage features of the device.

- When you are sure that the product has cooled down, hold the handle and pull it towards you (Figure 13) and remove the tray and grill inside the product. (Figure 14).

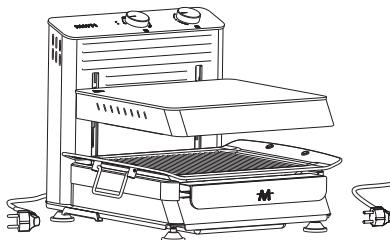


Figure 12

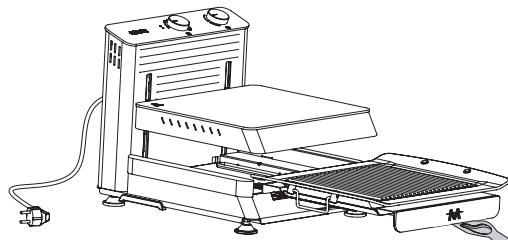


Figure 13

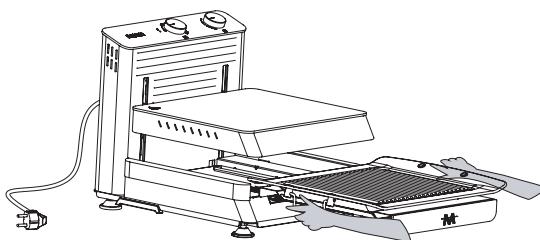


Figure 14

- Clean the tray and grill thoroughly with detergent water and a soft cleaning sponge.
- Clean the product with a slightly damp, soapy, soft cloth. After the moisture and dampness on the product is gone, plug the product into the socket and turn the on/off switch to position I. Then place the tray and grill in place.
- You can add **0.5 liters of water** to the tray before placing the food on the grill . (This will make it easier to clean the tray after cooking.)
- Place the food to be cooked on the grill. Hold the handle and push the tray into the product.
- Adjust the power setting and upper and lower distance adjustment buttons on the control panel to suit your cooking taste.
- Pull the tray towards you by holding the handle. After the top side of the food is cooked, turn the food over to cook the other side. Adjust the cooking of your food according to your taste.
- When you pull the tray and grill towards you by holding the handle, the power will be cut off automatically. After completing the turning process, push the tray and grill and the product will work.

10- Error Description and Possible Causes

- If the product does not work when you plug it in, make sure that the on/off switch is in position (I).

- If the on/off switch is in position (I) (Figure 15),

increase the power control button (Figure 16). If the product still does not work, make sure that the movable tray bed is seated in the product.

• If the error persists, make sure that the product is receiving power from the mains while the plug is in.

- If the error persists, call the authorized service

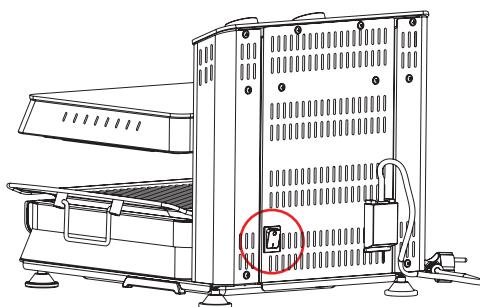


Figure 15

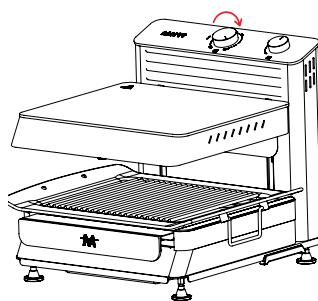


Figure 16

- If the power switch does not control the power, disconnect the product from electricity and call the authorized service.

- If the product does not cut off power when you pull the tray towards you, the tray switch is not working. Disconnect the product from electricity and call the authorized service.

- If the upper part of the product does not move, there is a motor fault. Disconnect the product from electricity and call the authorized service.

- If one of the filaments in the adjustable infrared cooking section is broken, your cooking time will be extended. Disconnect the product from electricity and call the authorized service.

- If you experience balance problems when you place the product on the counter, check the adjustable feet of the product.

- If the product is causing a sound problem when it reaches the maximum and minimum levels, there may be a limit switch error in the product. In this case, disconnect the product from electricity and call the authorized service.

- If the tray section does not come out when you pull the handle, the rails may not be functioning. Call the authorized service.

11- Product Cleaning and Maintenance

- Before any cleaning process, disconnect the product from electricity by unplugging it from the socket and wait for it to cool.
- The product should be thoroughly cleaned after each use. This will easily remove food residue and prevent it from burning when the product is used again later.
- Do not use steam cleaning products for cleaning
- Some detergents or cleaning agents may damage the surface. Do not use abrasive detergents and cleaning powders, cleaning creams or sharp objects when cleaning.
- Clean stainless steel surfaces using special stainless steel cleaning sprays or liquids available on the market.
- Use non-particulate cream cleaners or liquid cleaners. Do not use caustic (abrasive) creams, abrasive cleaning powders, hard scouring pads or hard tools, as these may damage the surfaces of the product.
- Do not use cleaners containing particles, as they may damage the glass and painted parts of the device.
- When cleaning the control panel and buttons, do not use liquid cleaners containing abrasive particles or wire dish sponges to prevent erasing of the markings.
- If any liquid overflows, remove it immediately to prevent damage to parts.
- All maintenance and repairs must be carried out only by authorized service and only original spare parts must be used.

Top Glass

- Clean and dry the upper glass with soft sponges and cloths.
- When cleaning glass surfaces, do not use hard metal scrapers or abrasive cleaning materials.
- Under no circumstances should you scrape off residues that have dried on the glass surface with serrated knives, steel wool or similar abrasive tools.

Plastic Parts and Painted Surfaces

- Clean plastic parts and painted surfaces using dishwashing detergent, warm water and a soft cloth or sponge, and dry with a dry cloth.
- Do not use hard metal scrapers or abrasive materials.

Filament Protection Glass

- To clean the filament protection glass, remove the glass retaining pins by turning them clockwise (Figure 18). Then separate the filament protection glass from the product by dragging it with the help of the grooves (Figure 19).
- Wash and clean the separated filament protection glass with soapy water. After the cleaning process is completed, replace the filament protection glass with the help of channels and fix it with the glass holder pins.

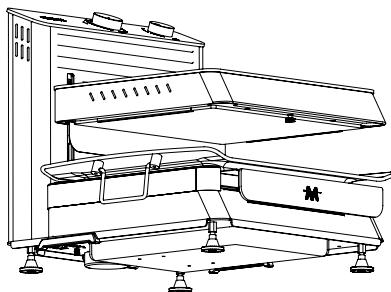


Figure 17

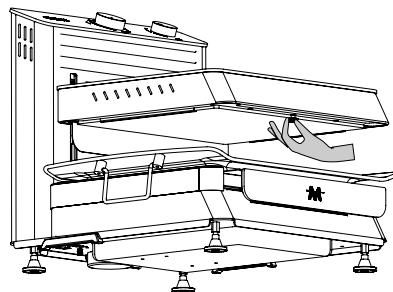


Figure 18

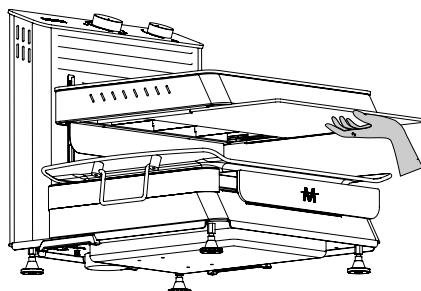


Figure 19

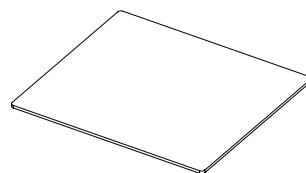


Figure 20
Filament Protection Glass

Tray, Grid and Grid Holder


- These parts are suitable for hand and dishwasher washing.

12- Cooking Tips

Product Name	Cooking Time on MITTI (min)
Beef meatball (minced)	5
Beef cubes (skewer)	7
Beef sausage	2
Beef sirloin	5
Beef ribeye	4
Homemade beef meatball	10
Beef chop	5
Beef T-bone steak	5
Lamb meatball (minced)	5
Lamb cubes (skewer)	7
Lamb beyti	7
Lamb culatello	6
Lamb loin (back)	6
Chicken wings	11
Chicken schnitzel	10
Chicken nugget	9
Chicken breast	6
Chicken thigh	7
Chicken chop	6
Chicken drumstick	7
Turkey sausage	8
Horse mackerel	4
Salmon	5
Mullet	4

Product Name	Cooking Time on MITTI (min)
Gilthead seabream	4
Sea bass	4
Potatoes (with oil)	10
Potatoes (without oil)	10
Red pepper	8
Green pepper	8
Zucchini	9
Artichoke	8
Asparagus	4
Button mushrooms	7
Celery	7
Brussels sprouts	7
Broccoli	5
Carrot	8
Leek	3
Banana	4
Quince	7
Avocado	2
Apple	3
Pear	8
Pumpkin	7
Chestnut	8
Bread	2
Halloumi cheese	3

 ***You can increase or decrease the cooking times according to your own taste.



WARRANTY CERTIFICATE

WARRANTY CERTIFICATE	
Manufacturer or Importer Company: Title: TANATAR DİE & STAMPİNG CO. LTD. Address: OİZ 14th Street No:9, Odunpazarı / ESKİŞEHİR Phone: 0-222-236 09 70 Fax : 0-222-236 09 69 E-mail : info@tanatar.com.tr Person's Signature: Company Stamp:	Seller Company: Title: Address: Phone: Fax: E-mail: Invoice Date and Number: Delivery Date and Place: Authorized Signature: Authorized Person's Signature:
Product	
Type: Electric Grills (15.3.13) Markası: MİTİ Model: T0001 (M-MTDB041201) Document Number:	Warranty Period: 2 (Two) Year Maximum Repair Time: 20 (Twenty) days Bandrol and Serial Number: Document Approval Date:

WARRANTY CONDITIONS

- 1) The warranty period starts from the date of delivery of the product and is 2 (two) years. (This period cannot be less than 2 years.) The warranty certificate can be given in writing on paper or through a permanent data storage. If the consumer requests, it must be given in writing on paper.

2)) The entire product, including all its parts, is under warranty.

3) In the event that it is understood that the goods are defective, the consumer may exercise the rights set forth in Article 11 of the Law No. 6502 on the Protection of Consumers;

a-Revocation of the contract,
b-Requesting a discount on the sale price,
c-Request repair free of charge,
ç- Requesting the replacement of the sold product with a defect-free equivalent,
may exercise one of its rights.

4) **If the consumer chooses the right to free repair among these rights**, the seller is obliged to repair the product or have it repaired without demanding any fee under any name such as labor cost, cost of replaced parts or any other name. The consumer can also use the right to free repair against the manufacturer or importer. The seller, manufacturer and importer are jointly and severally liable for the consumer's use of this right.

5) If the consumer exercises his/her right to free repair , in cases where the product;

 - Fails again within the warranty period,
 - Exceeds the maximum time required for repair,
 - It is determined by a report by an authorized service station, seller, manufacturer or importer that repair is not possible; the consumer may request the refund of the price of the product, a discount in proportion to the defect or, if possible, the replacement of the product with a defect-free equivalent from the seller. The seller cannot reject the consumer's request. If this request is not fulfilled, the seller, manufacturer and importer are jointly and severally liable.

6) The repair period of the product cannot exceed **20 business days**. This period starts on the date of notification of the malfunction of the product to the authorized service station or the seller within the warranty period, and on the date of delivery of the product to the authorized service station outside the warranty period. If the malfunction of the product cannot be repaired within **10 business days**, the manufacturer or importer must allocate another product with similar features to the consumer until the repair of the product is completed. In the event of malfunction of the product within the warranty period, the time spent in repair is added to the warranty period.

7) Malfunctions resulting from the use of the product contrary to the matters stated in the user manual are not covered by the warranty.

8) In case of any disputes that may arise regarding the exercise of rights arising from the warranty, the consumer may apply to the Consumer Arbitration Committee or Consumer Court in the place of residence or where the consumer transaction was made.

9) If this Warranty Certificate is not issued by the seller, the consumer may apply to the General Directorate of Consumer Protection and Market Surveillance of the Ministry of Commerce.


Technical Support Center 0-222- 236 09 70	Customer Service 0-222-236 09 70	Tanatar / El Teknik Ltd. Center Management Organized Industrial Zone 14th Street, No:926250 Odunpazari / ESKISEHIR
---	--	--

EXPLANATION:

1- The warranty certificate sample is for guidance only and is not a restrictive text.

2- The warranty certificate sample has been prepared for the purpose of informing consumers and manufacturers or importers, and manufacturers or importers may freely prepare their own warranty certificates, provided that they comply with Law No. 6502 and the Warranty Certificate Regulation.

3- The provisions in the sample warranty certificate are only valid for sales where one of the parties is a consumer.

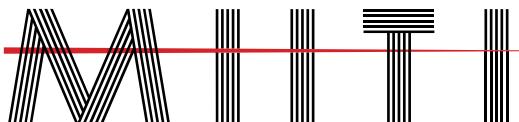

The use of this Warranty Certificate has been permitted by the General Directorate of Consumer Protection and Market Surveillance of the Ministry of Industry and Trade of the Republic of Turkey, in accordance with the Law on Consumer Protection No. 4077 and the Communiqué on the Implementation Principles of Warranty Certificates, which was put into effect based on this Law.

14- Technical Service List

** Service agreements will be updated after they are documented in accordance with the regulation.

NOTES

NOTES

**Tanatar Die & Stamping Co. Ltd.
Organized Industrial Zone, 14th Street, No. 9, 26250
Odunpazarı / Eskişehir / TÜRKİYE**

All rights belong to Tanatar Die & Stamping Co. Ltd.
Unauthorized use is prohibited, and it may not be copied, partially or entirely.